

ALARM POSITIONING

Compact units and sirens
Control units and modules

- ⇒ On the fireproof bulkhead next to the servo-brake oil tank.
⇒ Behind the passenger's glove box.

 











 
WIRING LOCATION

- ⇒ Original harness on the driver's side on the left side of the clutch pedal.

EARTH CONNECTION

Positive and Negative

- ⇒ To the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
DIRECTION INDICATOR LIGHTS: 	L. BLUE 1,5 mmsq. L. BLUE-BLACK 1,5 mmsq.	<i>Connector:</i> 18-pin WHITE-RED connected to the fuse box. <i>Position:</i> N. 15 and N. 4.
IGNITION LIVE: 	ORANGE 2,5 mmsq.	Connected to the ignition switch.
1° ENGINE IMMOBILISATION: (starter motor)  Use a 30 Amp. Gemini 2352 module.	RED-BLACK 2,5 mmsq.	Connected to the ignition switch.
2° ENGINE IMMOBILISATION: (injection-petrol and diesel vehicles) 	ORANGE 2,5 mmsq.	Connected to the ignition switch.
3° ENGINE IMMOBILISATION: (fuel pump-petrol and diesel vehicles) 	BLACK-VIOLET 2,5 mmsq.	Connected to the inertial switch behind the driver's kick plate.
CENTRAL DOOR LOCKING: - diagram N. 2. Common negative. 	<i>To open:</i> L. BLUE (mod. 99) BLUE-L. BLUE <i>To close:</i> WHITE (mod. 99) GREY-WHITE All of 0,75 mmsq section.	Driver's door harness.
ELECTRIC WINDOWS: use a 2244 or 2344 module. 	<i>Front:</i> + ↑ L.h.s.: VIOLET-BROWN + ↑ R.h.s.: RED-GREEN Both of 2,5 mmsq.	Driver's door harness.
DOOR AND BOOT PIN SWITCHES: (Brava Mod. < 1999) 	RED-BLACK 0,75 mmsq.	<i>Connector:</i> 14-pin WHITE on the fuse box. <i>Position:</i> N. 4.
DOOR AND BOOT PIN SWITCHES: (Brava Mod. 1999) 	YELLOW-RED 0,75 mmsq.	<i>Connector:</i> 20-pin WHITE on the fuse box. <i>Position:</i> N. 7.
DOOR AND BOOT PIN SWITCHES: (Bravo) 	WHITE-RED 0,75 mmsq. (Mod. 1999) BROWN-BLACK 0,75 mmsq.	Driver's door harness.
BONNET PIN SWITCH: Install the button supplied with the kit on the driver's light.		
BOOT PIN SWITCHES: (Brava Mod. 1999) 	BLACK-VIOLET 0,75 mmsq.	<i>Connector:</i> 20-pin WHITE on the fuse box. <i>Position:</i> N. 14.
BOOT PIN SWITCHES: (Bravo) 	RED-BLACK 0,5 mmsq. (Mod. 1999) BLACK-VIOLET 0,5 mmsq.	Connected to the boot light.
ACOUSTIC HORN: negative control. 	BLUE 0,5 mmsq.	<i>Connector:</i> 14-pin WHITE-RED connected to the back of the fuse box. <i>Position:</i> N. 5

VEHICLE KEY FOR RADIO KEY TRANSMITTER: Blade Kit RK N. 08

NOTE: the voltage sensing circuit can be isolated

N.B. THE ABOVE MENTIONED INFORMATIONS ARE ONLY INDICATIVE THE MANUFACTURER RESERVES THE RIGHTS TO EXECUTE MODIFICATION WITHOUT PRIOR NOTICE.