

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

For further technical informations please call +39 0332.227407 or contact us via E-mail cust.serv@cobra.it

MAKE FIAT MOD. BRAVA YEAR 97 o PETROL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment behind the headlamp on the drivers side, near the battery.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located in the 2 way white

connector in the fuse box.

- 31: connect to the general supply wiring located behind the left lateral

bulkhead, drivers side.

IGNITION WIRE

+ 15/54: connect to the 1,5 mm² ORANGE wire located in the wiring harness and coming out of the ignition key, alternatively to the 1mm² BLUE/RED wire located in the multiway connector in the fuse box.

DIRECTION INDICATORS

Connect to the LIGHT BLUE wires in the 12 way connector down on the right of the fuse box and to the LIGHT BLUE/WHITE wire in the 14 way white connector on the right of the fuse box.

ELECTRIC WINDOWS

Positive control signal Front window, driver's side:

cut the WHITE/RED wire coming out of the relevant original window

switch.

Front window, passenger's side:

cut the RED/GREEN wire coming out of the relevant original window

switch.

CENTRAL DOOR LOCKING

Negative control signal

Connect to the 0,75 mm² WHITE wire (lock) and BLUE wire (unlock) located in the bundle of cables coming out of the drivers side door, at the

rear of the fuse box.

IMMOBILISATION POINT

Fuel pump

Cut the 1,5 mm² BROWN/WHITE wire located in the white connector of

the right lower part of the fuse box.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, near the

rubber grommet of the boot.

DOOR SWITCH

Connect to the 1 mm2 WHITE/RED wire located near the core hitch of

the drivers side door.

BOOT SWITCH

Connect to the 1 mm² BLACK/VIOLET wire of the switch original line.