



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it


MAKE	FIAT	MOD.	PUNTO*	YEAR	04 →	PETROL <input type="checkbox"/> DIESEL <input checked="" type="checkbox"/>
------	-------------	------	---------------	------	-------------	---

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment near the support of the battery. Pass the cables through the original rubber sleeve near the brake fluid reservoir.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the 6 mm ² WHITE/RED wire located in the multiway connector in the fuse box. -31: connect with a ring terminal directly to the car body.
IGNITION WIRE	+ 15/54: connect to the 2 mm ² BLUE wire located in the connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the 1 mm ² PINK wire at the position nr.39 and to the PINK/WHITE wire at the position nr.38, in the 40 way black connector located in the front part of the fuse box.
ELECTRIC WINDOWS	Controls with mixed polarity Front window, driver's side: cut the 2,5 mm ² WHITE/RED and VIOLET/YELLOW wires. Front window, passenger's side: cut the 2,5 mm ² VIOLET/BLACK wire. These connections should be made in the wiring harnesses coming out of each switches control.
ACTIVAT./DEACTIVATION CONTROLS	Connections for art. 3800 To make this connection refer to the fitting diagram nr. 207.
IMMOBILISATION POINT	Gasoil pump Cut the ORANGE/WHITE bond on the black connector, in the lower part of the relay box located near the battery.
STARTER	+50: Cut the BROWN wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate.
DOORS SWITCH	Connect to the wires: RED at the position nr.8, WHITE/GREEN at the position nr.16, GREEN/GREY at the position nr.25, BLUE/VIOLET at the position nr.26, of the 40 way connector, in the fuse box. Refer to the fitting diagram nr. 208.
BOOT SWITCH	Connect to the LIGHT BLUE/BLACK wire at the position nr.36 of the 40 way connector, in the fuse box. Refer to the fitting diagram nr. 208.

FITTING DIAGRAM NR. 207

Diagram to connect art. 3800 on
FIAT PUNTO year 2004

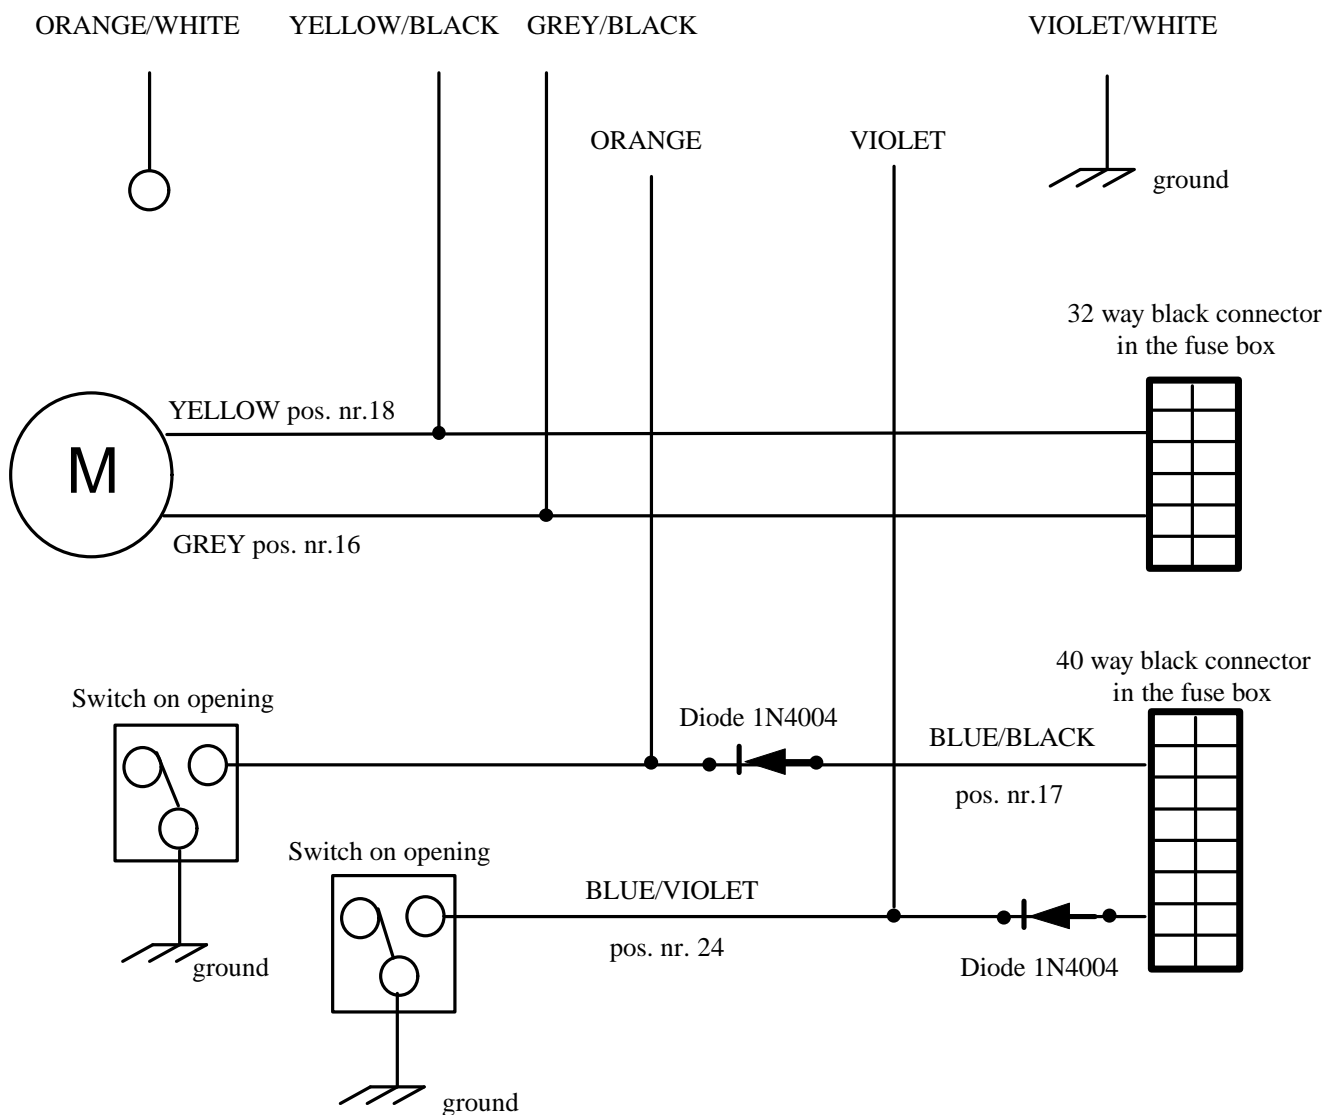

FITTING DIAGRAM NR. 208

Diagram for perimetrical connection with separated lines

