

## Fuel lift pump

### Checking operation - [Fig. 6](#) & [Fig. 7](#)

- Switch ignition ON. Fuel lift pump should run for approximately 1 second.
- If pump does not run: Switch ignition OFF.
- Remove fuel lift pump relay.
- Bridge relay base terminals 30 and 87 with a switched lead. Brava/Bravo & Marea: [Fig. 6](#). Multipla: [Fig. 7](#).
- Fuel lift pump should run continuously when switch is operated.
- If pump does not run: Check inertia fuel shut-off (IFS) switch and wiring.

