

ALARM POSITIONING

Compact units and sirens
Control units and modules

- ⇒ On the shock absorber turret on the driver's side (vehicles without ABS) or behind the light.
- ⇒ Under the driver's dashboard.










WIRING LOCATION

- ⇒ Use the original harness on the driver's side positioned on the servo brake.

EARTH CONNECTION

Positive and Negative

- ⇒ To the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
<u>DIRECTION INDICATOR LIGHTS:</u> 	PINK-WHITE 0,75 mmsq PINK 0,75 mmsq	<i>Connector:</i> 40-pin multiple BLACK-RED (grey section numbered from 1 to 20) connected to the fuse box. <i>Position:</i> N. 12 and N. 3
<u>IGNITION LIVE:</u> 	ORANGE 1,5 mmsq.	Wiring harness from the ignition switch.
<u>1° ENGINE IMMOBILISATION:</u> (starter motor)  Use a 30 Amp. Gemini 2352 module.	BROWN 1,5 mmsq.	Wiring harness from the ignition switch.
<u>2° ENGINE IMMOBILISATION:</u> (fuel pump - petrol and diesel vehicles). 	ORANGE 1,5 mmsq.	Wiring harness from the ignition switch.
<u>CENTRAL DOOR LOCKING:</u> diagram N. 2 - common negative. 	TO OPEN: VIOLET-L. BLUE 0,35 mmsq TO CLOSE: GREEN-WHITE 0,35 mmsq	<i>Connector:</i> 40-pin multiple BLACK-RED (black section numbered from 21 to 40) connected to the fuse box. <i>Position:</i> N. 24 and N. 34
<u>ELECTRIC WINDOWS:</u> use a Gemini 2244 or 2344 module. 	+ ↑ L.h.s.: WHITE-RED 1,5 mmsq + ↑ R.h.s.: VIOLET-BLACK 1,5 mmsq	<i>Connector:</i> 8-pin WHITE connected to the control switches on the central consolle.
<u>DOOR PIN SWITCHES:</u> 	YELLOW-BLUE 0,75 mmsq	<i>Connector:</i> 40-pin multiple BLACK-RED (black section numbered from 21 to 40) connected to the fuse box. <i>Position:</i> N. 21
<u>BONNET PIN SWITCH:</u> install the button supplied with the kit on the driver's light.		
<u>BOOT PIN SWITCH:</u> (Mod. With check control) 	GREY-BLACK 0,35 mmsq	<i>Connector:</i> 40-pin multiple BLACK-RED (black section numbered from 21 to 40) connected to the fuse box. <i>Position:</i> N. 36
<u>BOOT PIN SWITCH:</u> (Mod. Without check control) 	GREY-BLACK 0,75 mmsq	Connected to the boot light.

VEHICLE KEY FOR RADIO KEY TRANSMITTER: Blade kit RK N. 08

NOTE: the voltage sensing circuit can be isolated

N.B. THE ABOVE MENTIONED INFORMATIONS ARE ONLY INDICATIVE. THE MANUFACTURER RESERVES THE RIGHTS TO EXECUTE MODIFICATION WITHOUT PRIOR NOTICE.