


CHECKS ON FUEL FEED CIRCUIT

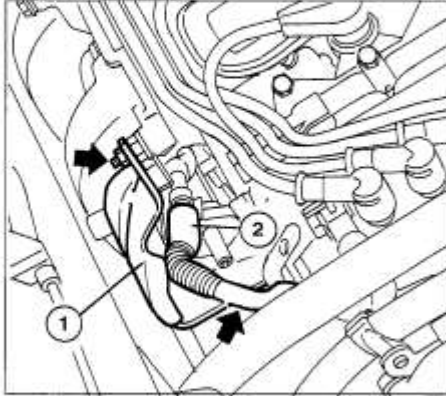

Checking fuel feed pressure

Proceed as follows to check fuel feed pressure:

- undo retaining nuts indicated by arrows and remove bracket (1);
- disconnect injector supply connector (2);
- arrange cock (4) of tool 1860955000 in open position and cocks (5) and (6) in closed position;
- position device 1860955000 and connect to the fuel manifold by means of special adaptor 18706844000 (3) then reconnect injector supply connector (2);

NOTE Device 1860955000 is fitted with adaptors for connection to different types of injection system. Fit the appropriate adaptors before making the connections.

- start the engine and check that the pressure gauge reading is stable at 3 bar \pm 0.2 bar when idling, then turn off the engine;
- operate the fuel pump with the engine off using a tester. Select fuel pump test when in active test mode;
- the pressure gauge should show a pressure increase of up to 4 bars.
- disconnect device 1860955000 from fuel manifold and refit bracket (1).

